





Chassis model 906		Since	Type
 Volkswagen	CRAFTER	2018	FWD RWD
 MAN	TGE	2018	4 X 4



|| TLS and TLM STEPS 601 - 901 - 1101

LEFT FRONT Door

Version	Step	Fitting kit
L3 / L4 / L5		

Comments


Installation not possible due to vehicle undercarriage equipment.

RIGHT FRONT Door

Version	Step	Fitting kit
L3 / L4 / L5	601	Undevelopped

Comments

Can be fixed to the chassis using bolts. Fixings to be made.

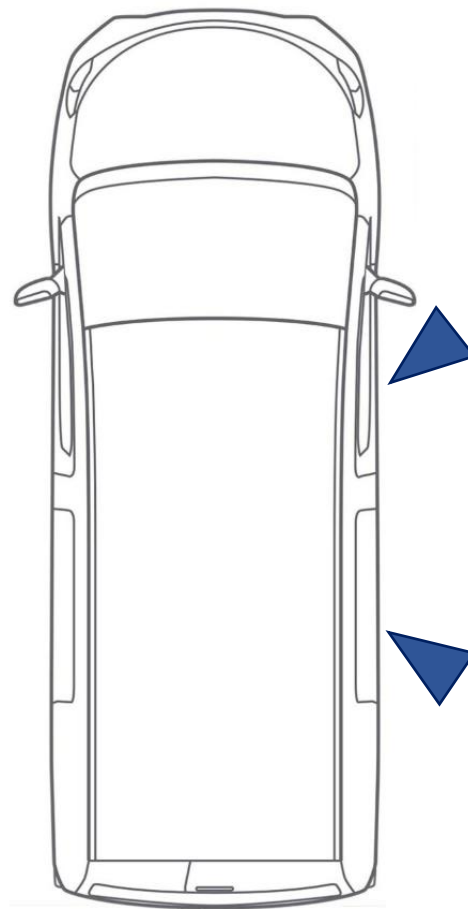

LEFT SIDE Door

Version	Step	Fitting kit
L3 / L4 / L5		

Comments


Installation not possible due to the fuel tank.

RIGHT SIDE Door

Version	Step	Fitting kit
L3 / L4 / L5	601	M0031
	901	M0032
	1101	M0031


Comments

Screws and bolts mounting without drilling the chassis or floor.

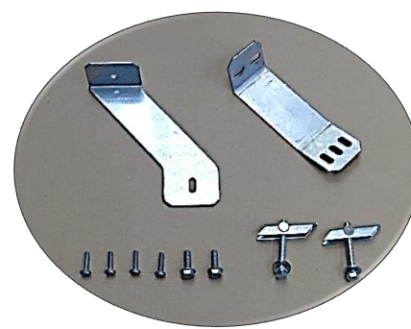


|| STEPS POSITION – RIGHT SIDE DOOR

601

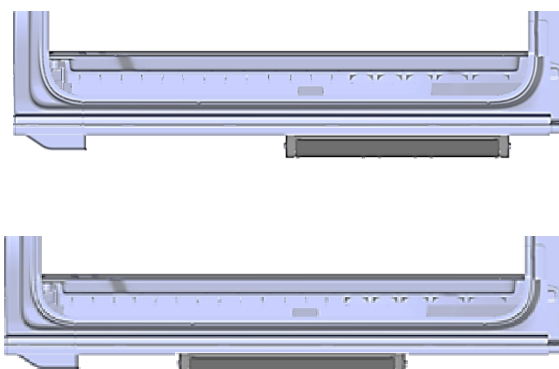

901

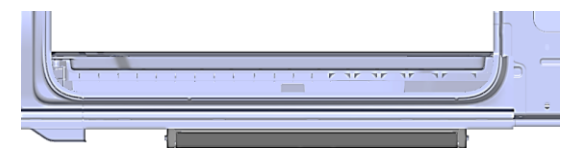

1101

