


Chassis model		Since
	TRANSIT 2T Propulsion & Traction	2013
	TRANSIT MINICAR	
	TRANSIT KOMBI	



■ TLS and TLM STEPS 601 - 901 - 1101

LEFT FRONT Door

Version	Step	Fitting kit
L2 / L3	601	Undevelopped

Comments


Can be fixed to the chassis.
Fixings to be made.

RIGHT FRONT Door

Version	Step	Fitting kit
L2 / L3	601	Undevelopped

Comments

Can be fixed to the chassis.
Fixings to be made.

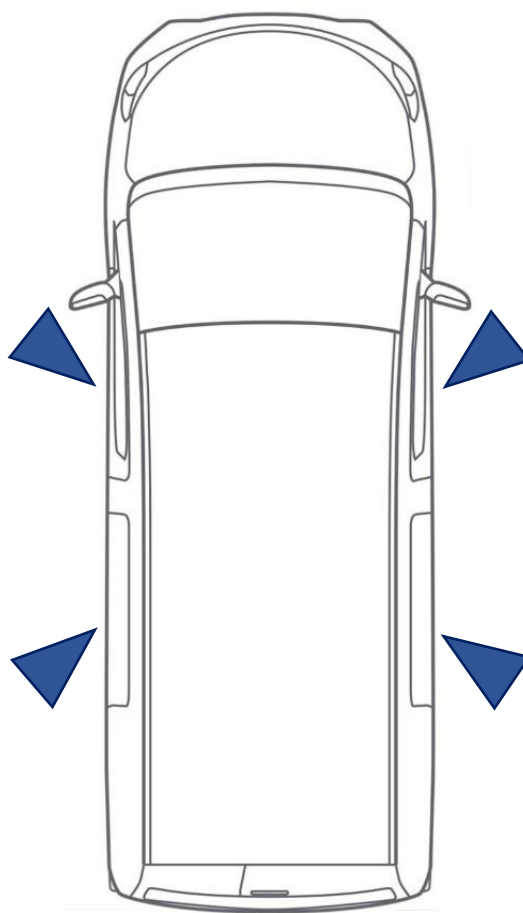

LEFT SIDE Door

Version	Step	Fitting kit
L2 / L3	(601)	M0038
	901	M0038
	1101	M0038

Comments


Due to the door width, prefer 901 or 1101.
Screws mounting without drilling the chassis.

RIGHT SIDE Door

Version	Step	Fitting kit
L2 / L3	(601)	M0038
	901	M0038
	1101	M0038

Comments

Due to the door width, prefer 901 or 1101.
Screws mounting without drilling the chassis.

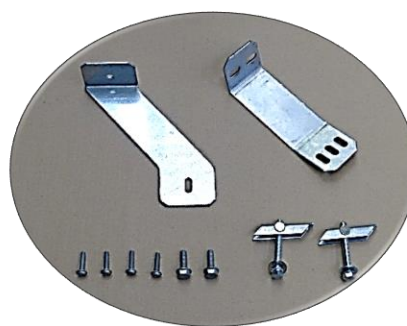

■ STEPS POSITION – RIGHT SIDE DOOR

601

901

1101


LEFT SIDE DOOR:
symmetrical view