



Chassis model K0		Since
	EXPERT EXPERT COMBI TRAVELLER	07/2014
	JUMPY III SPACE TOURER	07/2014
	PROACE	07/2016
	VIVARO III	01/2019



STEPS TLS and TLM 601 - 901 - 1101

LEFT FRONT Door

Version	Step	Fitting kit
L1 / L2 / L3		

Comments


No possibility of mounting : vehicle components under door.

RIGHT FRONT Door

Version	Step	Fitting kit
L1 / L2 / L3	601	Undevelopped

Comments

Can be fixed to the chassis using bolts in the existing holes.
Fixings to be made.

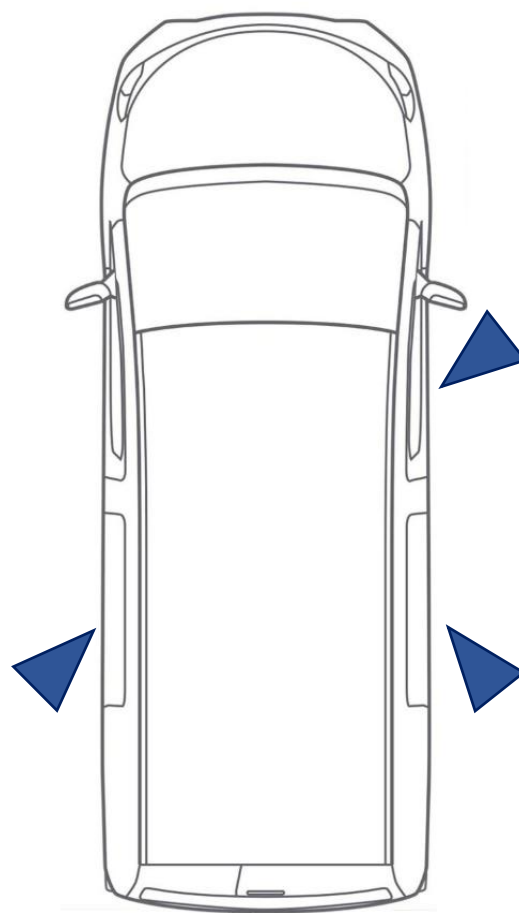


LEFT SIDE Door

Version	Step	Fitting kit
L1	601	M0024
L2 / L3	601	M0024
	901	M0024

Comments

Installation using screws without drilling the chassis or floor.

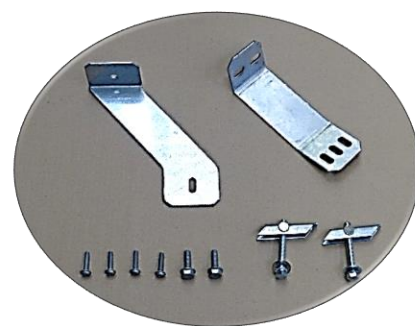

RIGHT SIDE Door

Version	Step	Fitting kit
L1	601	M0002
L2 / L3	601	M0002
	901	M0017

Comments

601 and 901 range specially adapted due to exhaust pipe which provides limited depth.
Installation using screws without drilling the chassis or floor.

STEPS POSITION – RIGHT SIDE DOOR

601



901



LEFT SIDE DOOR : symmetrical view