





Chassis model K9		Since
	RIFTER	01/2018
	BERLINGOT III	01/2018
	PROACE CITY	01/2018
	COMBO D	07/2018



## ■ TLS and TLM STEPS 601 - 901 - 1101

### LEFT FRONT Door

Version	Step	Fitting kit
L1 / L2	601	Undevelopped

#### Comments

Possible mounting : rear supports to be made and fixed by rivets in the chassis, plastic trim under vehicle to cut out.

### RIGHT FRONT Door

Version	Step	Fitting kit
L1 / L2	601	Undevelopped

#### Comments

Possible mounting : rear supports to be made and fixed by rivets in the chassis, plastic trim under vehicle to cut out.

### LEFT SIDE Door

Version	Step	Fitting kit
L1 / L2	601	Undevelopped

#### Comments


Possible mounting : rear supports to be made and fixed by rivets in the chassis, plastic trim under vehicle to cut out.

### RIGHT SIDE Door

Version	Step	Fitting kit
L1 / L2	601	<b>M0033</b>


#### Comments

Plastic trim under vehicle to cut out.

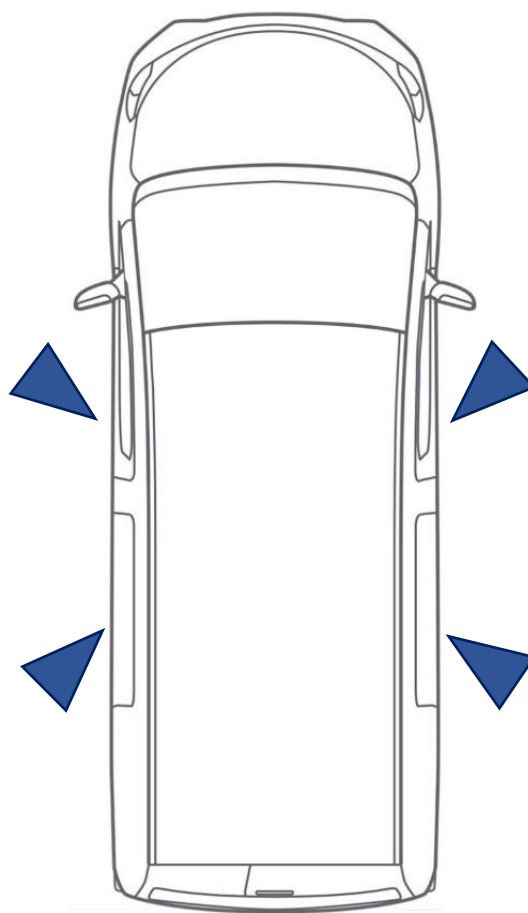

## ■ STEPS POSITION – RIGHT SIDE DOOR

**601**

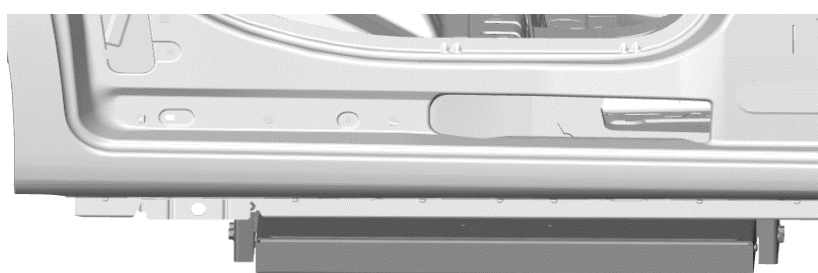

**LEFT SIDE DOOR :**  
Symmetrical view