




Chassis model T6		Since
 Volkswagen	CARAVELLE KOMBI MULTIVAN CALIFORNIA TRANSPORTER	2015



■ TLS and TLM STEPS 601 - 901 - 1101

LEFT FRONT Door

Version	Step	Fitting kit
L1 / L2		

Comments


Possible mounting of the 601 but risky : very low position under the vehicle's equipment.
Requires specific adaptation parts to lower the step.

RIGHT FRONT Door

Version	Step	Fitting kit
L1 / L2	601	Undevelopped

Comments

Bolts mounting without drilling the chassis or floor.

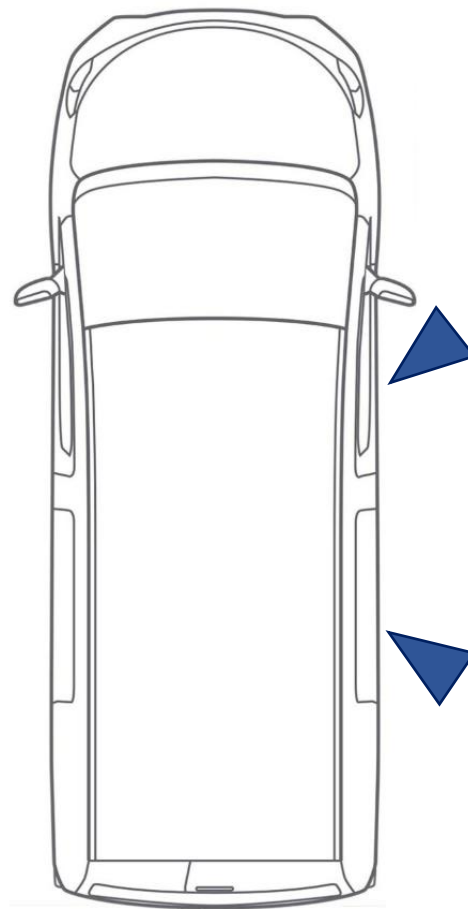

LEFT SIDE Door

Version	MP	Kit fixation
L1 / L2		

Comments

Possible mounting of the 601 but risky : very low position under the vehicle's tank.
Requires specific adaptation parts to lower the step.

RIGHT SIDE Door

Version	Step	Fitting kit
L1 / L2	601	M0001
	(901)	M0001

Comments

Bolts and screws mounting without drilling the chassis or floor.
Due to the width of the door, prefer the 601.



■ STEPS POSITION – RIGHT SIDE DOOR

601



901

