




Chassis model 447		Since
 Mercedes-Benz	VITO	2015
	CLASS V	



■ TLS and TLM STEPS 601 - 901 - 1101

LEFT FRONT Door

Version	Step	Fitting kit
L1 / L2	601	Undevelopped

Comments


Space available to mount the step and can be taken up under the chassis.

RIGHT FRONT Door

Version	Step	Fitting kit
L1 / L2	601	Undevelopped

Comments

Space available to mount the step and can be taken up under the chassis.

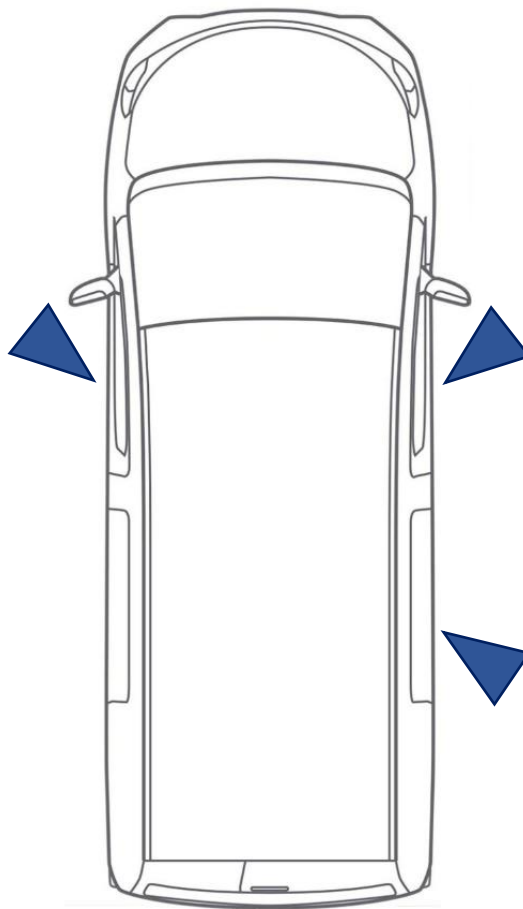

LEFT SIDE Door

Version	Step	Fitting kit
L1 / L2		

Comments

Installation impossible due to the fuel tank. Impossible on E-Vito : batteries under floor.

RIGHT SIDE Door

Version	Step	Fitting kit
L1 / L2	601	M0028
	(901)	M0029

Comments

Screws and bolts mounting without drilling the chassis or floor.


901 is suitable for large side doors (961 mm).

Impossible on E-Vito : batteries under floor.



■ STEPS POSITION – RIGHT SIDE DOOR

601

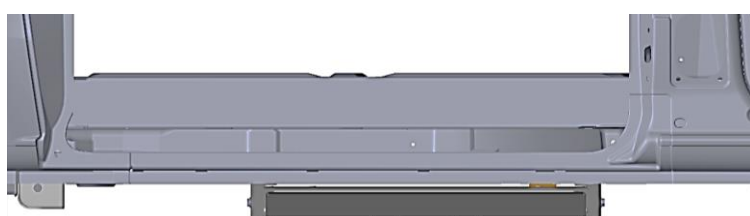

901

