



Chassis model K0		Since
	EXPERT TRAVELLER E-EXPERT / E-TRAVELLER	07/2014
	JUMPY III / SPACE TOURER E-JUMPY	07/2014
	PROACE	07/2016
	VIVARO III	01/2019



STEPS TLS and TLM 601 - 901 - 1101

LEFT FRONT Door

Version	Step	Fitting kit
L1 / L2 / L3		

Comments


No possibility of mounting : vehicle components under door.

RIGHT FRONT Door

Version	Step	Fitting kit
L1 / L2 / L3	601	Undevelopped

Comments

Can be fixed to the chassis using bolts in the existing holes.
Fixings to be made.

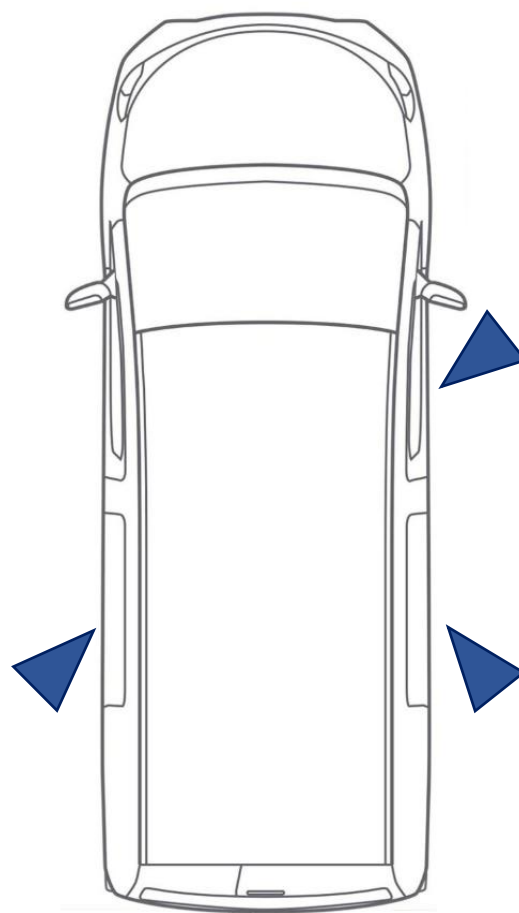

LEFT SIDE Door

Version	Step	Fitting kit
L1	601	M0024
L2 / L3	601	M0024
	901	M0024

Comments

Installation using screws without drilling the chassis or floor.
Possible mounting with small and big battery pack.



RIGHT SIDE Door

Version	Step	Fitting kit
L1	601	M0002
L2 / L3	601	M0002
	901	M0017

Comments

601 and 901 range specially adapted due to exhaust pipe which provides limited depth.
Installation using screws without drilling the chassis or floor.
Possible mounting with small and big battery pack.

STEPS POSITION – RIGHT SIDE DOOR

601



901



LEFT SIDE DOOR : symmetrical view