



Chassis model X62		Since
	MASTER III MASTER Z.E.	04/2010
	MOVANO	04/2010
	NV 400	06/2011



## ■ TLS and TLM STEPS 601 - 901 - 1101

### LEFT FRONT Door

Version	Step	Fitting kit
L1 / L2 / L3		

**Comments**


Impossible because of the battery box.

### RIGHT FRONT Door

Version	Step	Fitting kit
L1 / L2 / L3	400 ROT 6	Non développé

**Comments**

Only vehicle without AD BLUE (tank positioned under the door)  
Rather simple mounting.  
Sinking chassis edge, requires a front support plate to be made.

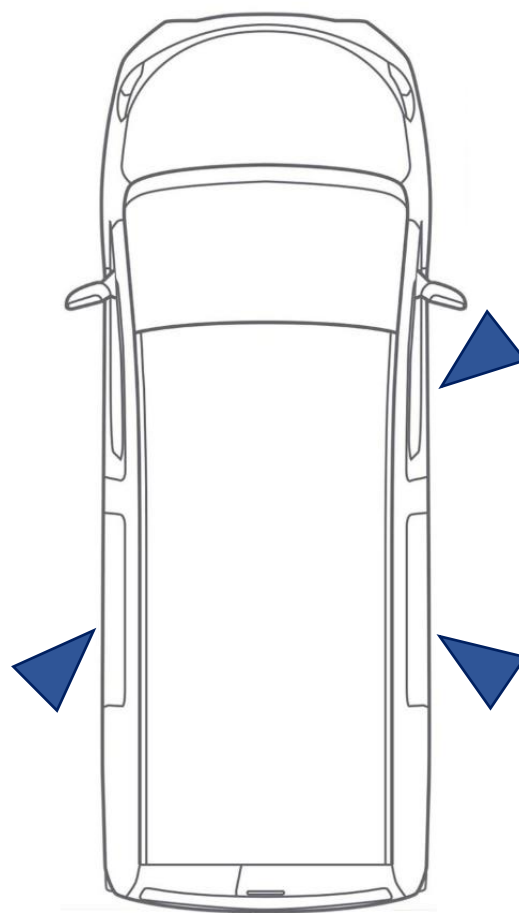

### LEFT SIDE Door

Version	Step	Fitting kit
L1	601	M0016
	901	M0016
L2 / L3	601	M0016
	901	M0016
	1101	M0016

**Comments**


Can be fixed using screws in existing holes in the chassis or floor.

### RIGHT SIDE Door

Version	Step	Fitting kit
L1	601	M0016
	901	M0016
L2 / L3	601	M0016
	901	M0016
	1101	M0016


**Comments**

Can be fixed using screws in existing holes in the chassis or floor.

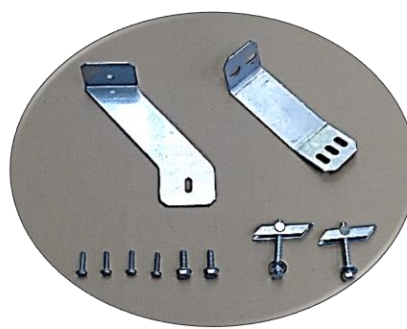


## ■ STEPS POSITION – RIGHT SIDE DOOR

**601**



**LEFT SIDE DOOR :**  
Symmetrical view

**901**



**1101**

