



Chassis model		Since
	TOURNEO CUSTOM	2012
	TRANSIT CUSTOM CUSTOM pHEV (hybrid)	
	TRANSIT CUSTOM KOMBI	



STEPS TLS and TLM 601 - 901 - 1101

LEFT FRONT Door

Version	Step	Fitting kit
L1 / L2	601	Undevelopped

Comments


Space available for mounting the step.
Can be fixed to the chassis.

RIGHT FRONT Door

Version	Step	Fitting kit
L1 / L2	601	Undevelopped

Comments

Space available for mounting the step.
Can be fixed to the chassis.

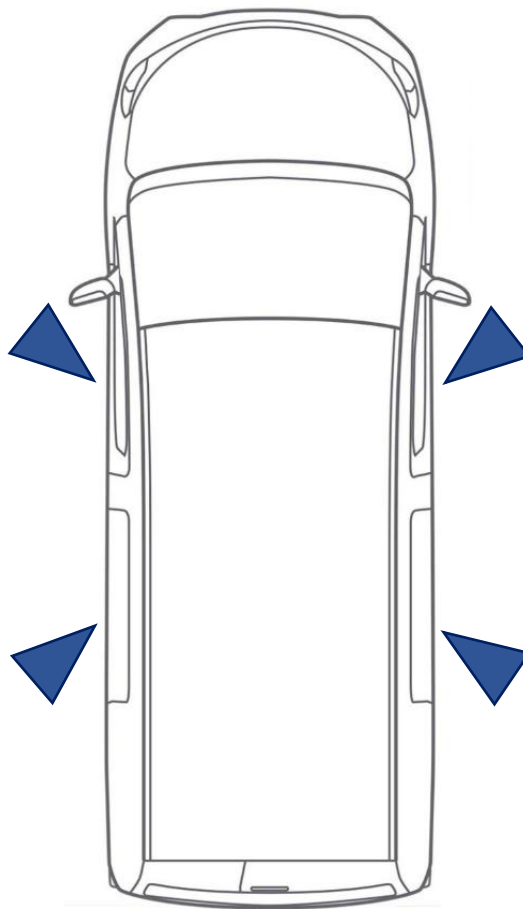

LEFT SIDE Door

Version	Step	Fitting kit
L1 / L2	601	M0013
L2	901	M0014

Comments


Screws mounting without drilling the chassis or floor.
Hybrid vehicle : 601 only

RIGHT SIDE Door

Version	Step	Fitting kit
L1 / L2	601	M0013
L2	901	M0014

Comments

Screws mounting without drilling the chassis or floor.
Hybrid vehicle : 601 only

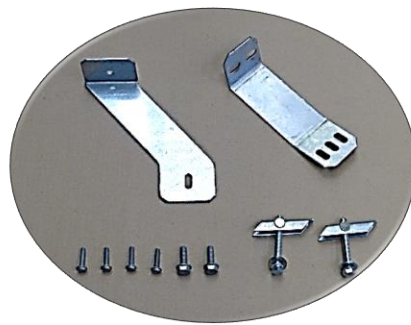

STEPS POSITION – RIGHT SIDE DOOR

601



901



LEFT SIDE DOOR: symmetrical view