



Chassis model K9		Since
	RIFTER PARTNER III	01/2018
	BERLINGOT III	01/2018
	PROACE CITY	01/2018
	COMBO D	07/2018



■ TLS and TLM STEPS 601 - 901 - 1101

LEFT FRONT Door

Version	Step	Fitting kit
L1 / L2	601	Undevelopped

Comments


Possible mounting : rear supports to be made and fixed by rivets in the chassis, plastic trim under vehicle to cut out.

RIGHT FRONT Door

Version	Step	Fitting kit
L1 / L2	601	Undevelopped

Comments

Possible mounting : rear supports to be made and fixed by rivets in the chassis, plastic trim under vehicle to cut out.

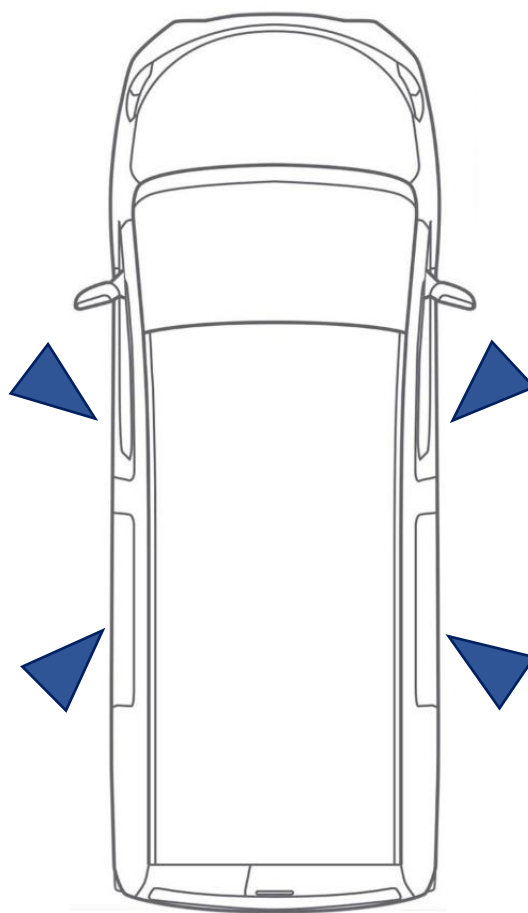

LEFT SIDE Door

Version	Step	Fitting kit
L1 / L2	601	Undevelopped

Comments

Possible mounting : rear supports to be made and fixed by rivets in the chassis, plastic trim under vehicle to cut out.

RIGHT SIDE Door

Version	Step	Fitting kit
L1 / L2	601	M0033


Comments

Plastic trim under vehicle to cut out.



■ STEPS POSITION – RIGHT SIDE DOOR

601

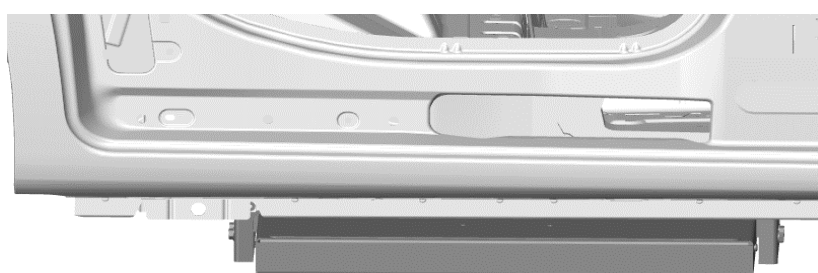

LEFT SIDE DOOR :
Symmetrical view